




Figure 1: 2600, 2600S & 2600L

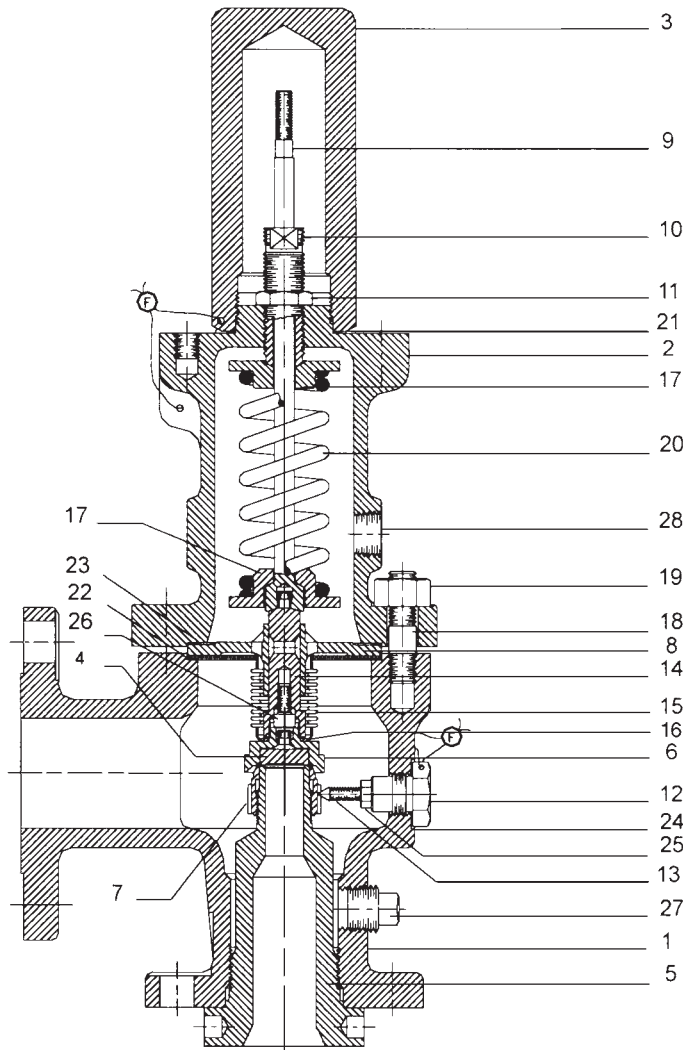

Details - Optional O Ring Seats

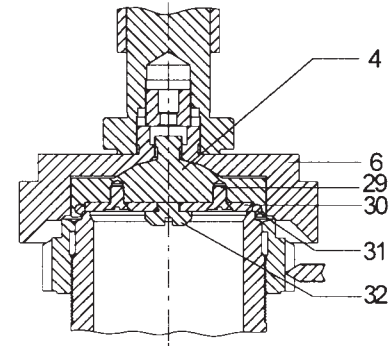

L through T orifice

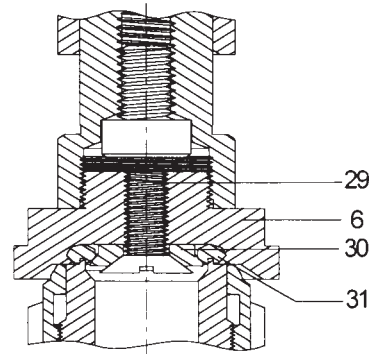

D through K orifice

Figure 1: 2600, 2600L & 2600S Series Parts List

1	Body	12	Lock Screw (B.D.R.)	23	Bonnet Gasket
2	Bonnet or Yoke	13	Lock Screw Stud	24	Lock Screw Gasket
3	Cap	14	Stem Retainer	25	Hex Nut (B.D.R.L.S.)
4	Disc	15	Bellows*	26	Lock Screw (Disc Holder)
5	Nozzle	16	Bellows Gasket*	27	Pipe Plug (Body)
6	Disc Holder	17	Spring Button	28	Pipe Plug (Bonnet)*
7	Blow Down Ring (B.D.R.)	18	Body Stud	29	Flat Head Machine Screw
8	Sleeve Guide	19	Hex Nut (Body)	30	O Ring Retainer
9	Stem	20	Spring	31	O Ring Seat Seal
10	Spring Adjusting Screw	21	Cap Gasket	32	Jack Screw Plug
11	Jam Nut (Spr. Adj. Scr.)	22	Body Gasket		

*Conventional design does not use bellows and bellows gasket, but does have bonnet pipe plug. Bellows valves do not come with a bonnet pipe plug.