CONVEYING PIPE


CONNECTION

DENSITY STABILISER AIR SUPPLY

1/2" B.S.P. PIPE

ASSEMBLY INSTRUCTIONS...

ω

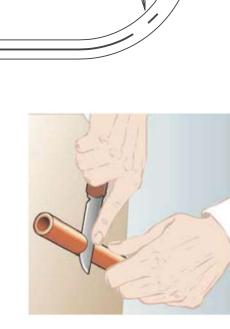

 ∞

- 1. CUT HOSE RIGHT ANGLED WITH A SHARP KNIFE ENSURING A SMOOTH FLAT END FACE ON HOSE
- 2, INSERT ITEM (3) INTO HOSE
- 3. PLACE END OF FITTING AGAINST A FLAT OBJECT (BENCH, DOOR, WALL), GRIP HOSE AND PUSH WITH A STEADY FORCE UNTIL END OF HOSE IS COVERED BY YELLOW PLASTIC COLLAR
- 4. TEST THE HOSE IS FULLY SECURE, NO ADDITIONAL CLAMPS ARE NEEDED IF INSTALLED CORRECTLY

YEARLY MAINTENANCE RECOMMENDATIONS

- 1. CLEAN DUT STRAINER ITEM (1)
- 2. CHECK ORIFICE TUBE ITEM (8) FOR ANY BLOCKAGE

0 15

PIPE NIPPLE

1/2" B.S.P

N

- 3. CHECK OPENING TO CONVEY PIPE IS NOT RESTRICTED
- 4. CHECK FUNCTION OF NON RETURN VALVE ITEM (10) BY CHECKING SEATING OF MEMBRANE SEE CAT 5577

Ú

5. INSPECT UPPER SECTION OF ASSEMBLY FOR SIGNS OF MATERIAL DEPOSITS

TYPICAL DENSITY STABILISER ASSEMBLY

COPPER CONCENTRATE CONVEYING SYSTEM OPERATION AND MAINTENANCE MANUAL

5.12.7 **Density Stabilisers**

Product Reference: K60440604 (P103626-02 revision 04)

Catalogue Reference: 5576

ITEM	PART NO	DESCRIPTION	QTY
1	A1280	Strainer ¾" BSP	1
2	M1607	Bush ½" BSP x 3/8" BSP Hex	1
3	A20326	Hose End ½" BSP Male	2
4	A2017	Hose ½" NB	0.6m
5	A20253	Elbow ½" BSP to 12mm O/D Tube	1
6	A3872	Olive 12mm O/D Tube	2
7	A1985	Tubing Nut	2
8	P19641E-10	Orifice Tube 12mmDia 3.5mm	1
9	A2095	Adaptor 12mm O/D	1
10	P100713-00	Non Return Valve ¾" BSP	1