

CC 220

BOSCH

The control panel includes a monochrome screen, a numeric keypad (0-9), and several function buttons. The Bosch logo is visible in the bottom left corner of the panel.

This section of the control panel features three rotary dials labeled SC%, Fw%, and F Inc. Below the dials is a grid of 16 function buttons with various icons. A red emergency stop button is located at the top left of this section.


A standard black computer keyboard is positioned to the right of the control panel.


**MEGO**  
 Metallbearbeitungs-Center

**Achtung - wichtig!!**

Anzugsbolzen UCP  
 Mit L-Kör unter Bohrung  
 Ohne L-Kör ohne Bohrung

Wenn nicht anbedeutet,  
 erforderlich, L-Kör verwenden!

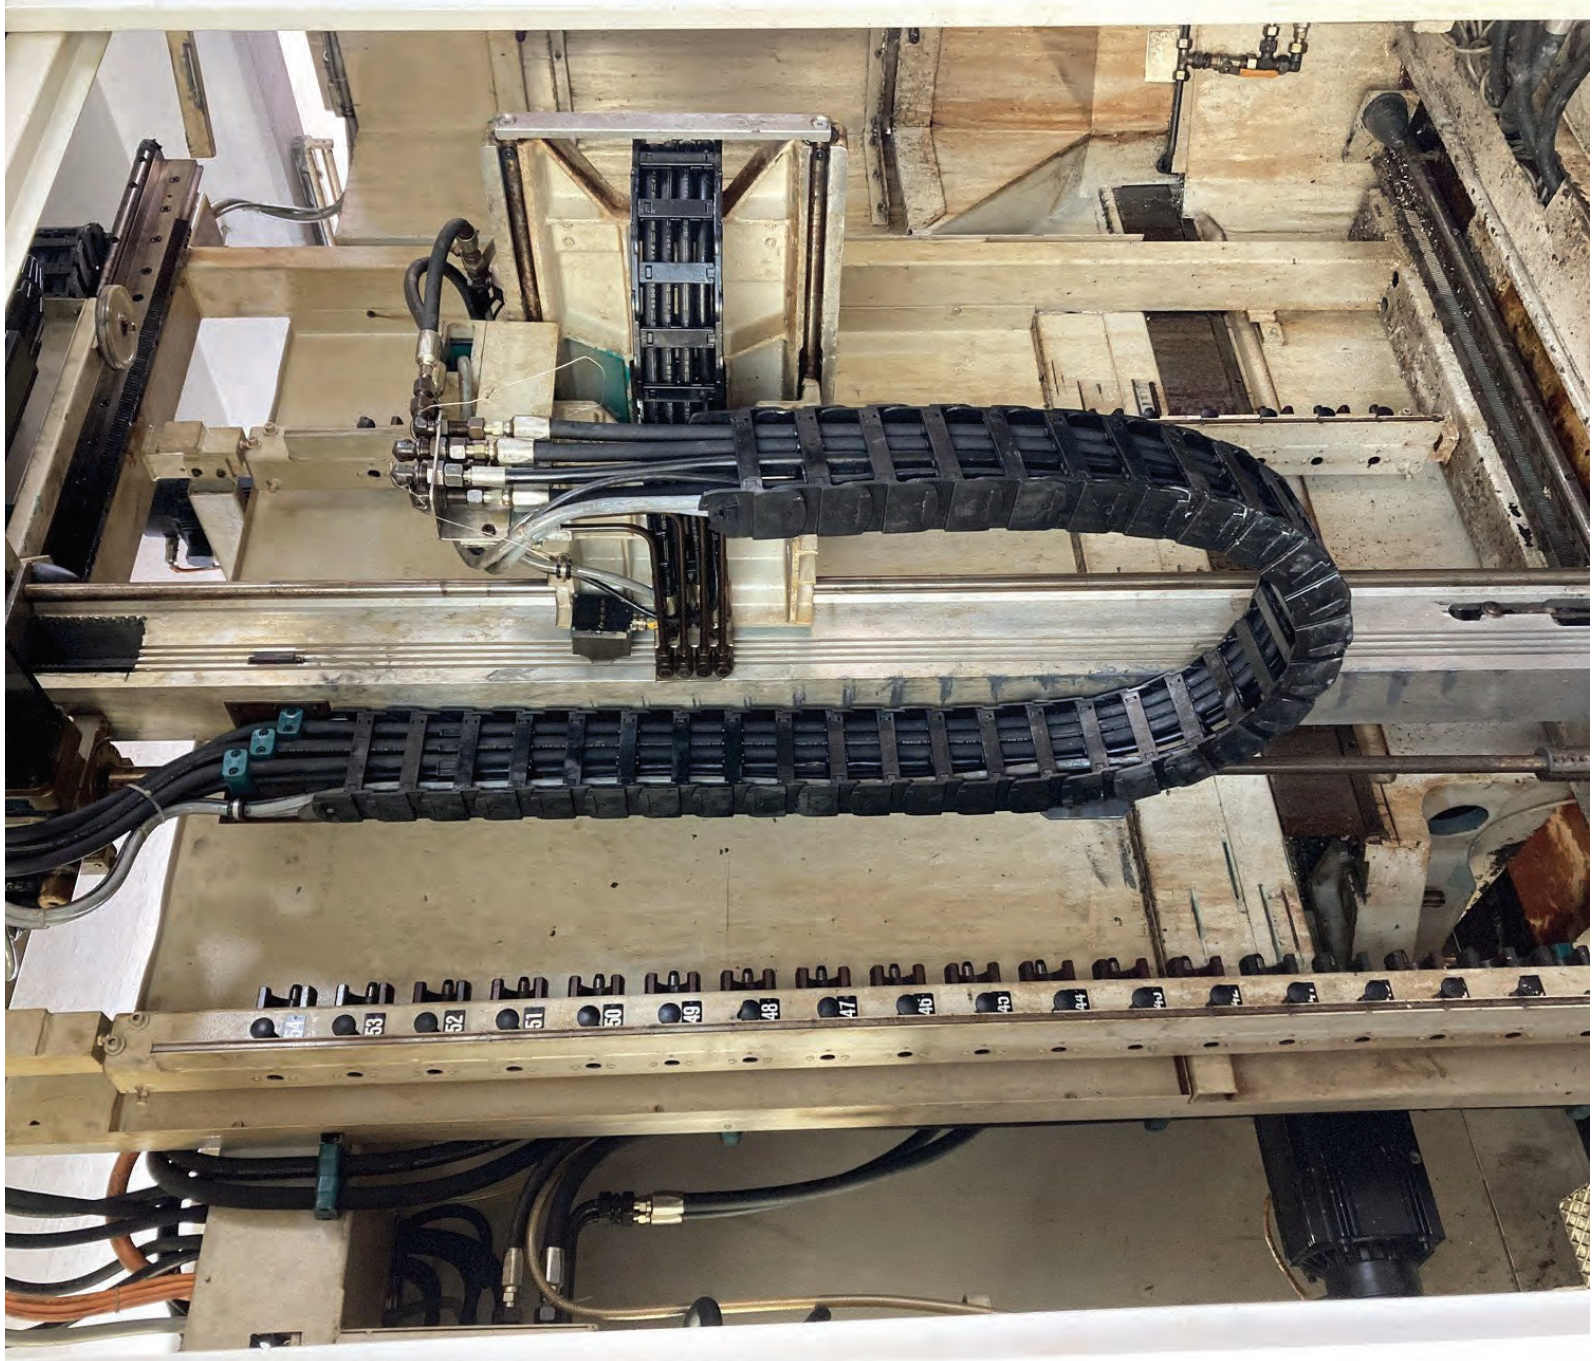

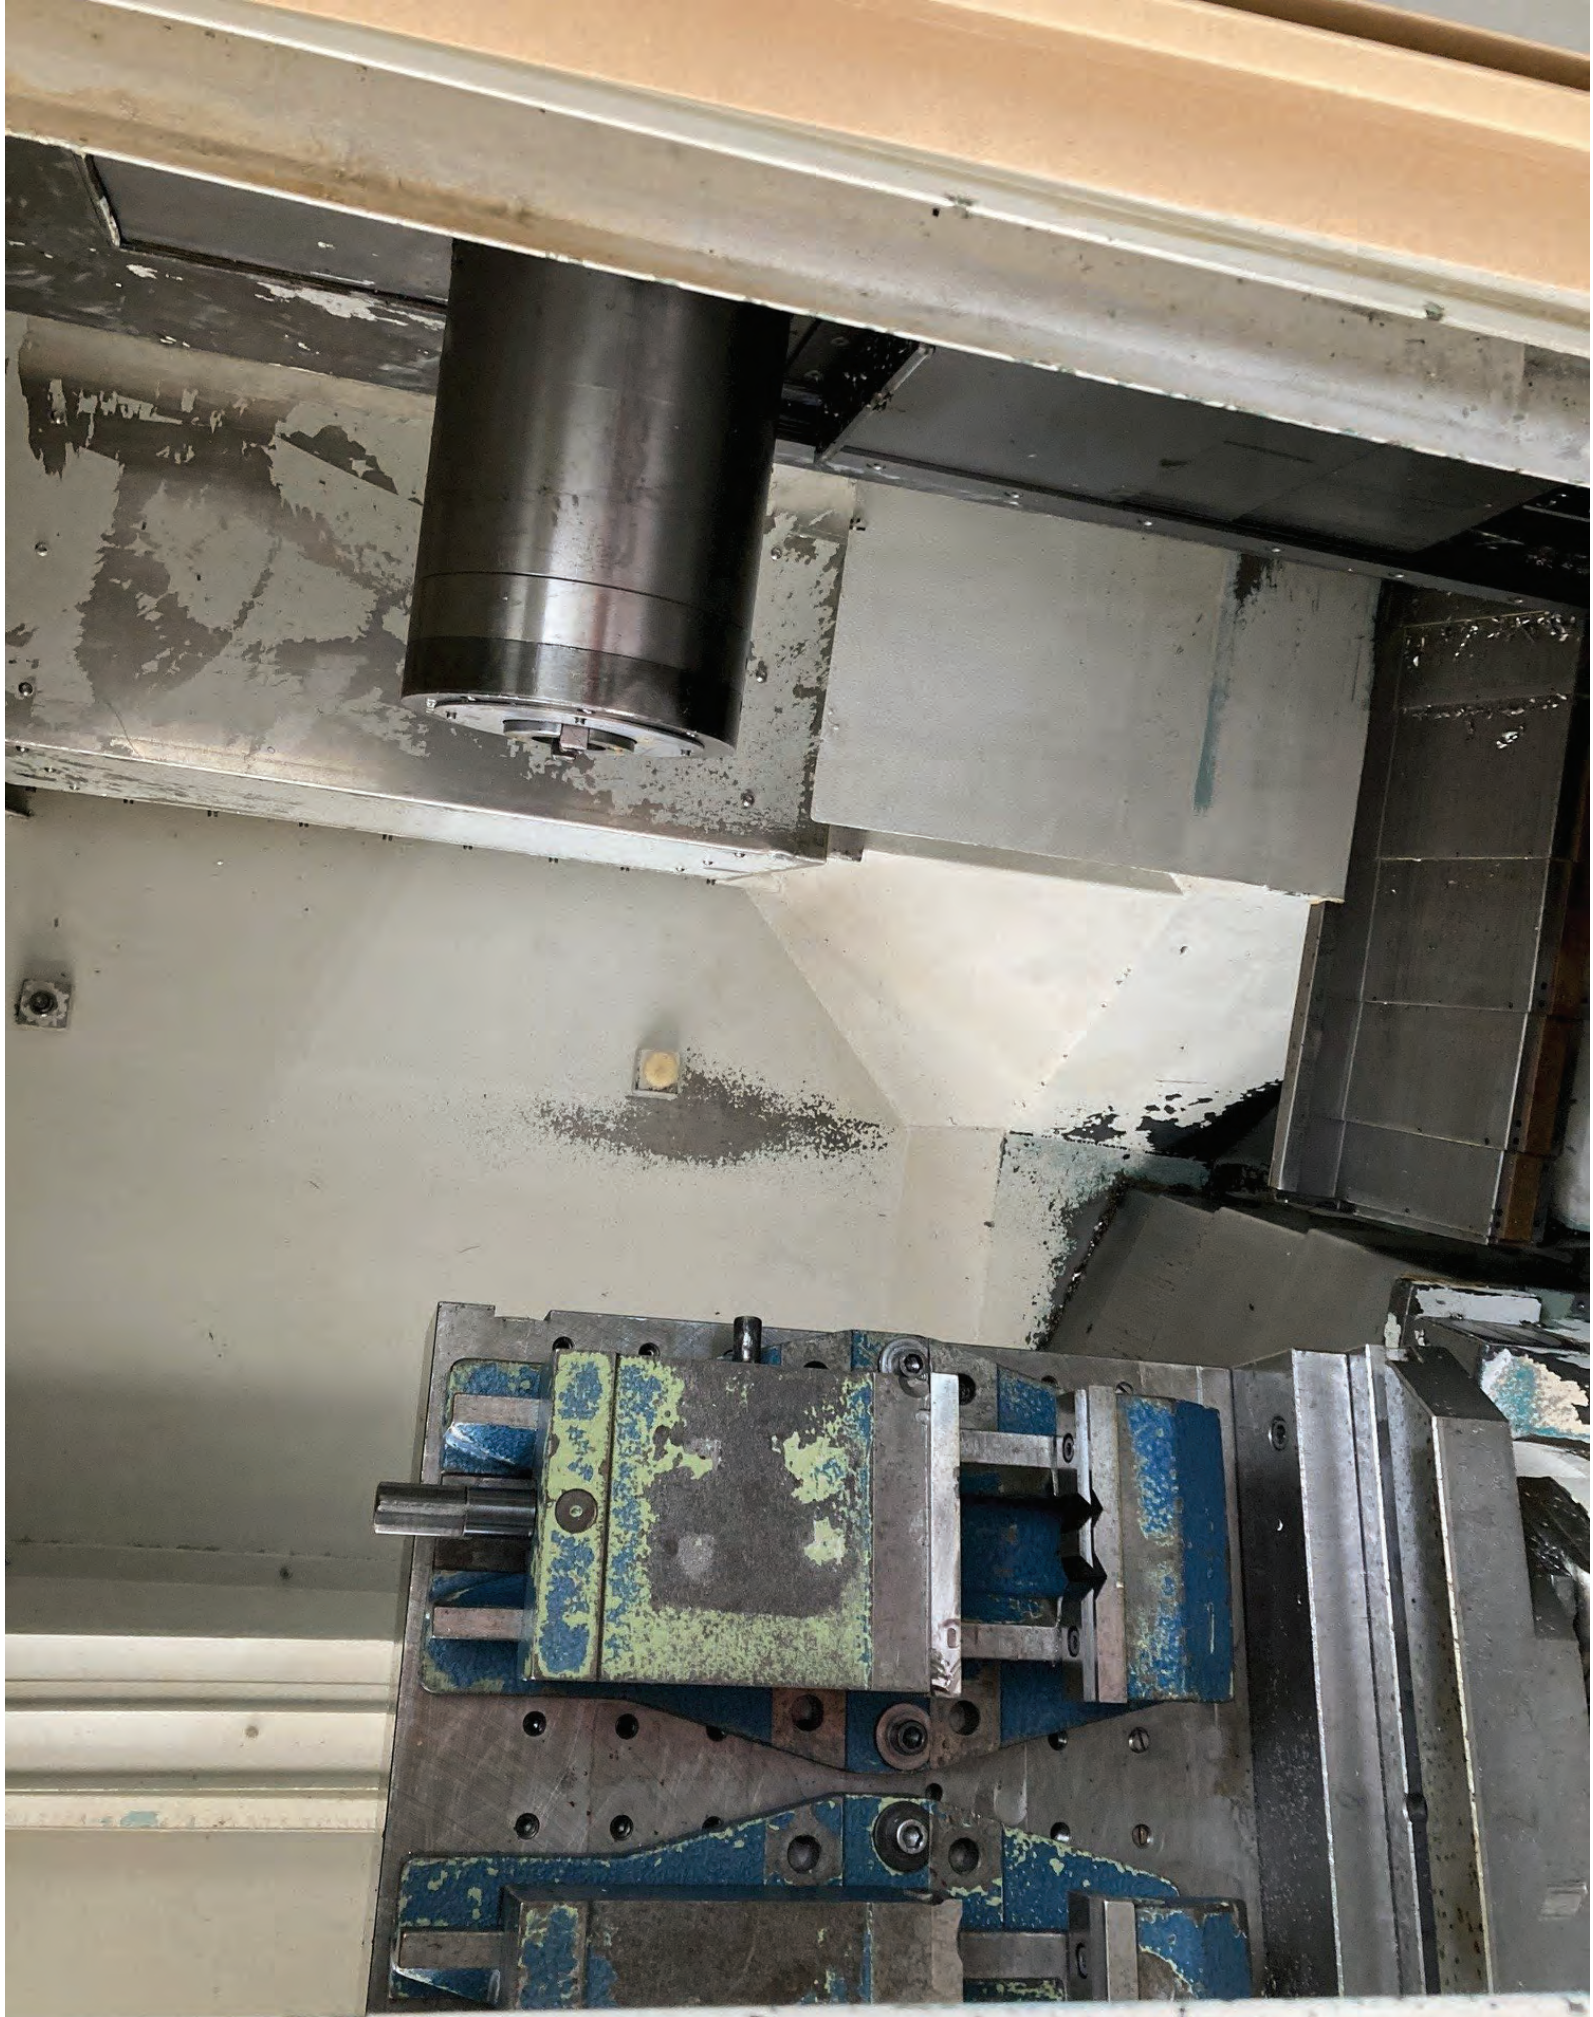



M MIKRON

UCP 630

