




1 :Put the silicone tube into the pump, with proper tightness.



2: After installing the filling nozzle, note that the end of the filling nozzle is about equal to the bottom line of the magnet

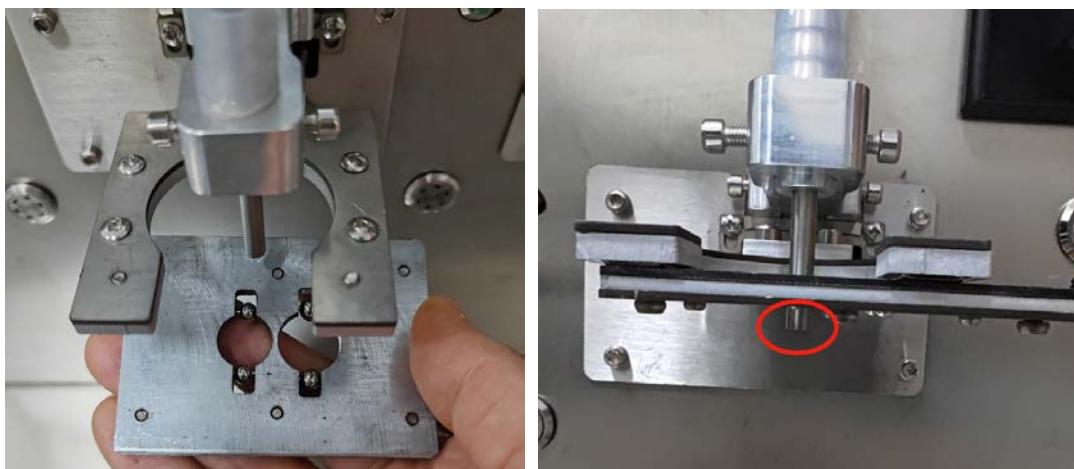

3: Move the bottle clamp to ensure that the filling nozzle is concentric with the bottle mouth, and the filling nozzle must not collide with the bottle mouth.

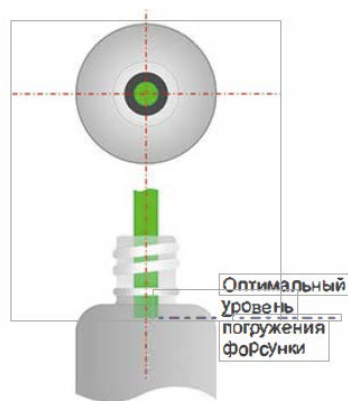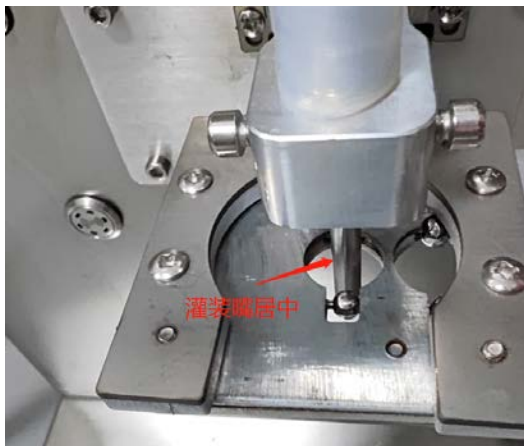


4: After adjusting, remove the sample bottle and turn on the power.


5: After self-checking finished, Pop up the language selection interface.




6: Please confirm that nothing is placed on the electronic scale at first and then click the "ok" button

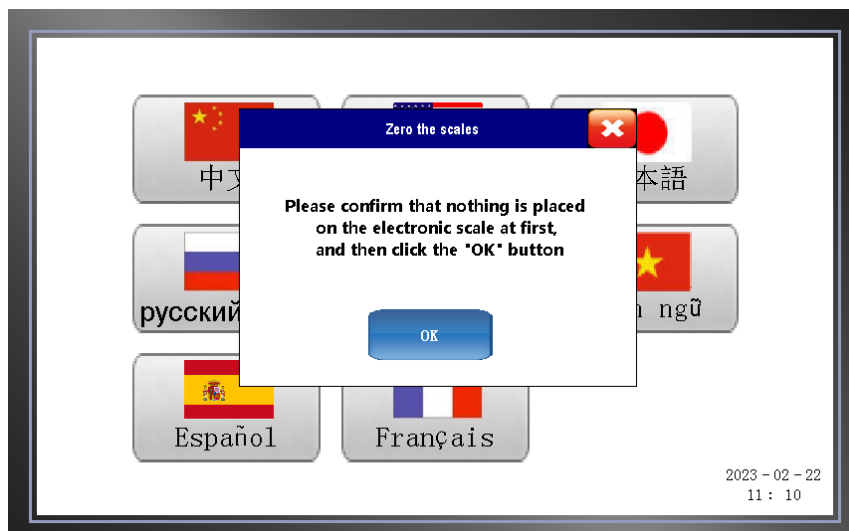


7: Please confirm that the empty bottle has been placed and click "Ok" after the display is stable

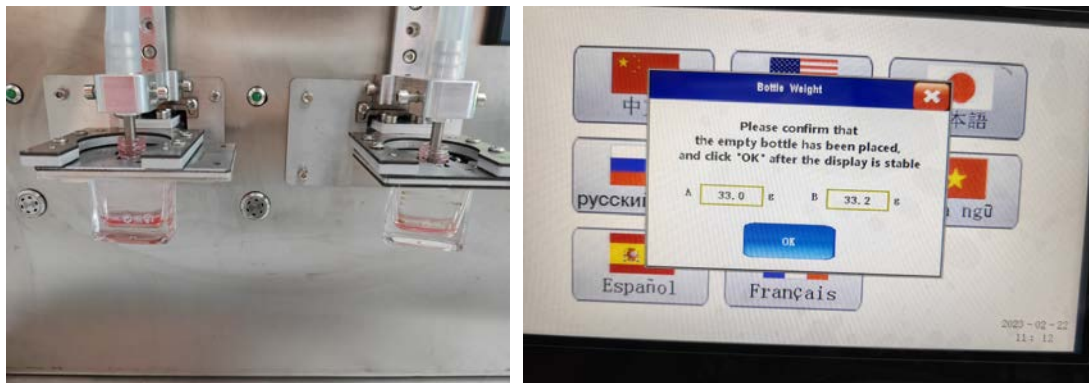

8: Filling Weight Setting

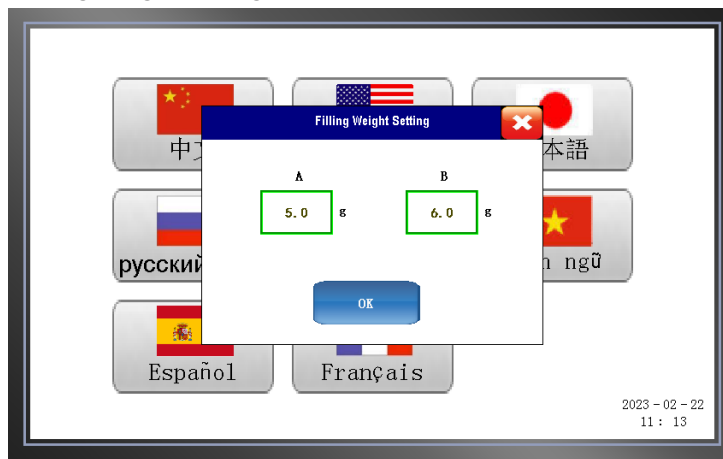

9 Then Click the button , make it change to 

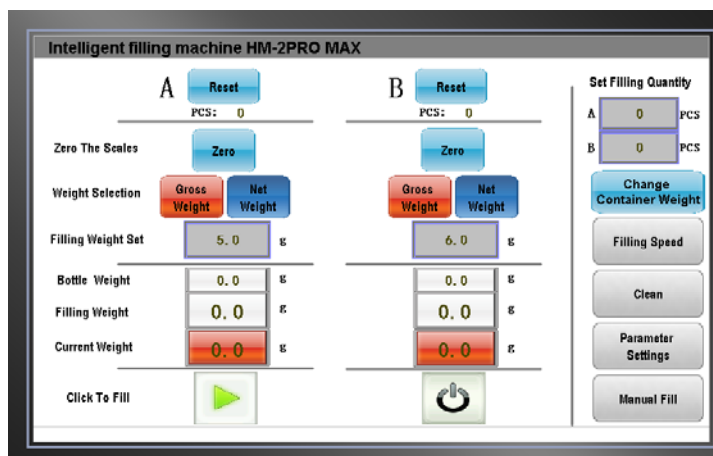

Then it can work automatic now, you just need to change the bottle after the prior one finish filling.