


CAPSULATRICI AUTOMATICHE

AUTOMATIC CAPPING MACHINE




FOOD AND BEVERAGE LINES

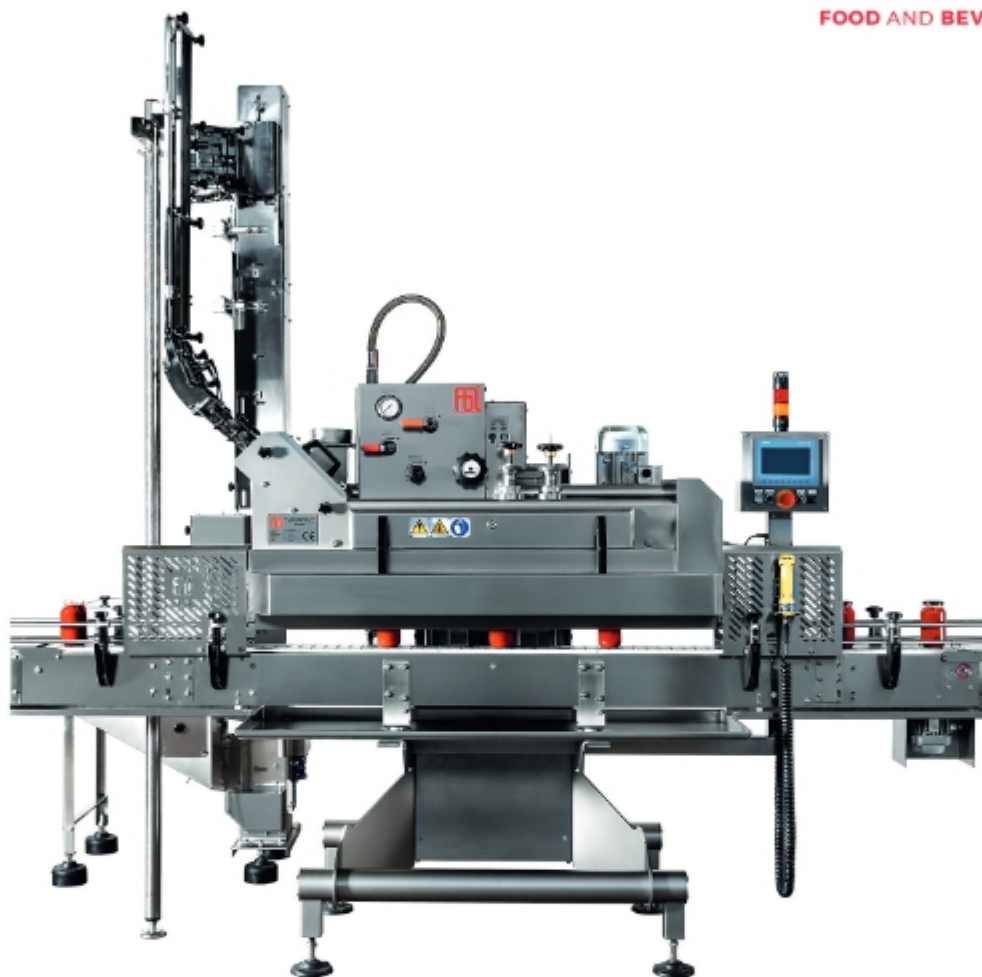

CAPSULATRICI AUTOMATICHE

AUTOMATIC CAPPING MACHINE

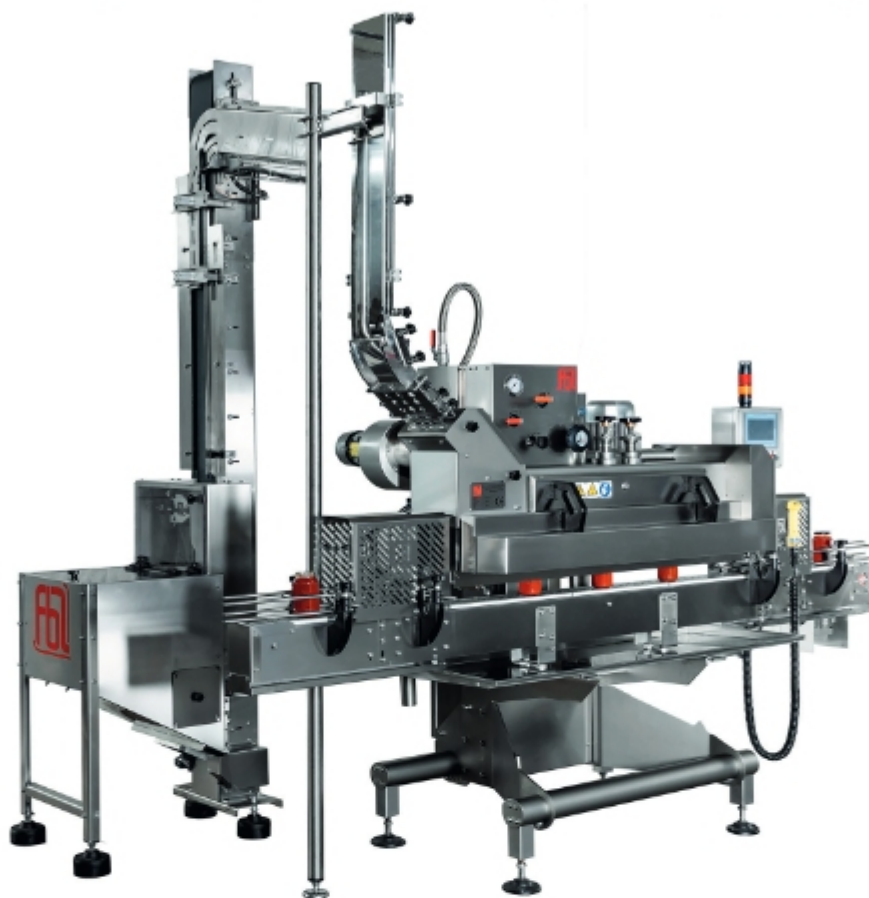

La capsulatrice automatica viene utilizzata per la chiusura sottovuoto, tramite insufflazione di vapore nello spazio di testa, di contenitori in vetro con capsula T.O. (Twist-Off®) e P.T. (Press-on Twist-Off®). Con opportune attrezzature è possibile lavorare capsule Twist-Off® con le seguenti dimensioni: 27 - 38, 43 - 89 (di serie) e 100 - 110. La capsulatrice FL-150 può essere fornita di alimentatore verticale magnetico capsule del seguente modello: AOV-1 o AOV-2.

The automatic capping machine suitable to close under vacuum, by steam injection in the head space, glass containers having T.O. (Twist-Off®) metal caps and P.T. (Press-on Twist-Off®) type. With specific devices, is possible to handle caps size from Twist-Off®: 27 - 38, 43 - 89 (standard) and 100 - 110 as well. Capping machine FL-150 can be supplied with a vertical caps sorter-feeder in the following model: AOV-1 or AOV-2.

DATI TECNICI - TECHNICAL FEATURES

| Modello <i>Model</i> | Produzione ora <i>Output cph</i> T.O. 63- T.O. 82 | Capsule T.O. <i>T.O. Caps</i> | Altezza vaso <i>Jar height</i> | Consumo vapore <i>Steam consumption</i> | Potenza assorbita <i>Power input</i> |
|-------------------------|---|----------------------------------|-----------------------------------|--|---|
| FL-150 | 9.000 - 7.200 | 27 - 110 | 40 - 280 mm. | 50 Kg/h 4 bar | 3 KW |
| FL-150 HS | 12.000 - 9.200 | 27 - 110 | 40 - 280 mm. | 50 Kg/h 4 bar | 3 KW |

ACCESSORI A RICHIESTA - ACCESSORIES ON REQUEST

Prelievo supplementare per capsule T.O. 27-38
 Prelievo supplementare per capsule T.O. 100-110
 Prelievo supplementare per capsule P.T.
 Gruppo chiusura per capsule P.T.
 Alimentatore verticale magnetico AOV-1 o AOV-2
 Surriscaldatore di vapore

Additional drawing for caps T.O. 27-38
Additional drawing for caps T.O. 100-110
Additional drawing for P.T. caps
Additional closing group for P.T. caps
Vertical magnetic caps feed AOV-1 or AOV-2
Steam overheating

